
## 422G-A, Air Angle Grinder - Exploded View

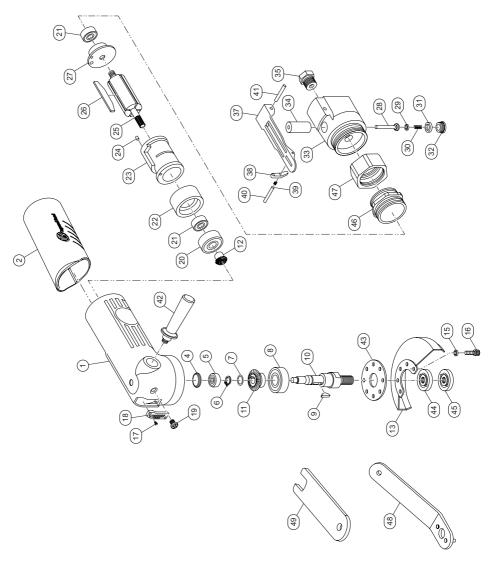

(Dwg. TL-422-PLM-1)







## 422G-A, Air Angle Grinder - Parts List

ltem	Part Description	Part Number	Item	Part Description	Part Number
	Housing Kit	422G-A-A40		Throttle Valve Kit	422G-A-K302
1	Main Housing		28	Valve Stem	
2	Soft Grip		29	O-Ring	
*	Warning Label		30	Spring	
	Arbor Kit	422G-A-K105	31	O-Ring	
4	Dust Cover		32	Screw Cap	
5	Bearing		Ī	Throttle Valve Housing Assembly	422G-A-A409
6	E-clip		33	Rear Housing	
7	Spacer		34	Brass Bushing	
8	Bearing		35	Air Inlet	
9	Woodruff Key		*	Nameplate Label	
10	Spindle			Throttle Lever Assembly	422G-A-A400
	Bevel Gear Kit	422G-A-K552	37	Trigger	
11	Gear		38	Lever Block	
12	Gear		39	Spring	
	Wheel Guard Kit	422G-A-K106-5	40	Bolt	
13	Metal Guard	422G-A-106	41	Trigger Bolt	
*	Guard Warning Label	LA421B-EU-99G	42	Handle	422G-A-48
	Guard Screw Kit	422G-A-K638	43	Gasket	422G-A-83
15	Spacer (Qty 4)		44	Rear Flange Nut	422G-A-27
16	Cap Screw (Qty 4)		45	Front Flange Nut	422G-A-305
	Exhaust Deflector Kit	422G-A-K23	46	Fixing Ring	422G-A-588
17	Screw (Qty 2)		47	Connecting Nut	422G-A-304
18	Muffler		48	Pin Wrench	422G-A-69
19	Screw		49	Wrench	422G-A-26
	Tune-up Kit	422G-A-TK		<u> </u>	
20	Bearing				
21	Bearing (Qty 2)				
22	Front Plate				
23	Cylinder				
			_		

Bolt

Rotor Rotor Blade (Qty 4) Rear Plate

24

25

## **Parts and Maintenance**

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling. Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest  $\boldsymbol{\textbf{Ingersoll Rand}}$  office or distributor.

## **Related Documentation**

Manuals can be downloaded from ingersollrand.com

For additional information, refer to:

Product Safety Information Manual 04584959 Product Information Manual TL-422-PIM Declaration of Conformity TL-422-DOC



<sup>\*</sup> Indicates not illustrated.