

47506158001 Edition 2 January 2015

ltem	Part Description	Part Number	(CCN)	Item	Part Description	Part Number	(CCN)
*	Motor Housing Kit	LUB5130-K40M	(47506785001)	26	PCB Assembly		
1	Housing, Motor			27	Switch		
2	Warning Label			28	Ferrite Assembly		
37	Screw, Pump Hous-			29	LED	LUB5130-K498	(47510849001)
	ing (4)			30	Lens, LED	LUB5130-K1010	(47512205001)
*	Electric Motor Kit	LUB5130-K54	(47507234001)	31	Gasket, Canister	LUB5130-K283	(47510850)
3	Motor			32	Canister	LUB5130-K809	(47510851001)
4	Adaptor Plate, Motor			*	Handle Housing Kit	LUB5130-K40	(47506785001)
38	Screw, Motor Adapter Plate (4)			33	Housing, Right Handle		
39	Screw, Motor (2)			34	Housing, Left Handle		
*	Pump Housing Kit	LUB5130-K727	(47507236001)	35	Information Label		
5	Washer, Motor			36	Screw, Handle Housing (6)		
б	Pinion			37	Screw, Pump Housing (4)		
7	Gear Assembly			*	Screw Kit	LUB5130-K68	(47507239001)
8	Bearing			37	Screw, Pump		
9	Spur Gear				Housing (8)		
10	Housing, Pump			38	Screw, Motor Adapter		
11	Ball			20	Plate (4)		
12	Spring			39	Screw, Motor (2)		
13	Gasket			36	Screw, Handle Housing (6)		
14	Plug			41	Battery (1.5 Ah)	BL2005	(48386783)
15	Wave Washer			*	Battery (2.5 Ah)	BL2012	(47515903001)
1.6	Assembly			*	Battery (3.0 Ah)	BL2010	(48386791)
16	Bushing			*	Battery (5.0 Ah)	BL2022	(47515902001)
17	Crank Assembly			*	Label Kit	LUB5130-K99	(47507240001)
18	Slide Block Assembly			*	Protective Battery Boot		
19 20	Slide Block Holder				For BL2005, BL2012	BL2005-BOOT	(47510965001)
	Screw, Slide Block				For BL2010, BL2022	BL2010-BOOT	(47510964001)
21	Pressure Relief Valve	LUB5130-K526	(47510844001)	*	Battery Charger	BC1121	(47507879001)
40	Warning Label, Injection Hazard			2	Warning Label		
22	Valve, Bleed	LUB5130-K359	(47510845001)	35	Information Label		
23	Valve, Fill	LUB5130-K159	(47510846001)	40	Warning Label,		
24	Gasket, Hose	LUB5130-K223	(47510847001)		Injection Hazard		
25	Hose	LUB5130-K873	(47510848001)	*	Carrying Case	LUB5000-CASE	(47504239001)
*	Switch Kit	LUB5130-K93	(47507237001)	*	Case Latch	W7000-LATCH	(47507275001)

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand office or distributor.

Related Documentation

Manuals can be downloaded from ingersollrandproducts.com

For additional information, refer to:

Cordless Grease Gun Product Safety Information Manual 47505746.

Cordless Grease Gun Product Information Manual 47505747.



ingersollrandproducts.com © 2015 Ingersoll Rand 47506158001 Edition 2 January 2015